

B920 Intrusion System Instruction Card

For B4512 and B5512 Intrusion Panels



Arming the System

1. Enter your personal passcode and press the **ENTER** key.
2. Proceed to the nearest exit delay door

Disarming the System

1. Enter through the nearest entry delay door.
2. Enter your personal passcode and press the **ENTER** key.

Perimeter Arming

1. Press the **PART** key or **CMD 3** to arm only the perimeter.
2. Enter your personal passcode and press the **ENTER** key.

Note: To prevent the alarm from sounding, the alarm system must be disarmed before leaving through any perimeter door. The display will read, **Part On Dly** if the system is armed. Follow the instructions above to disarm.

Force Arming the System

1. Enter your personal passcode and press the **ENTER** key.
2. The display will read **Check area 1**.
3. Press the **NEXT** key twice.
4. The display will read **Review complete. Enter to force on**.
5. To force arm, press the **ENTER** key or the **ESC** key to exit.

Bypassing a Point

1. Press the **BYPASS** button and select **1** or press **CMD 0**
2. Enter your personal passcode and press the **ENTER** Key.
3. Enter the point number to be bypassed or press the **NEXT** key to view the next bypassable point.
4. Press **ENTER** to bypass.

Unbypassing a Point

1. Press the **BYPASS** button and select **2** or press **CMD 00**
2. Enter your personal passcode and press the **ENTER** Key.
3. Enter the point number to be unbypassed or press the **NEXT** key to view the next bypassed point.
4. Press **ENTER** to unbypass.

Silencing an Alarm

1. Enter your personal passcode and press the **ENTER** key.
2. The display will read ***Alarm Silenced***, the number of alarms recorded and display the point text from the point(s) that generated the alarm condition.
3. To clear alarm memory and stop the keypad from scrolling, press the **ENTER** key.
4. Enter your personal passcode and press the **ENTER** key to clear the display.

Silencing System Trouble Tones


1. Press the **ENTER** key to silence a trouble tone.

Turn Watch Mode On or Off

1. Press the **MENU** button followed by **51** or **CMD 6**
2. Press **ENTER** to turn watch mode on.
3. To turn off, repeat step 1 and 2.

Using the Help Menu

1. Press the **HELP** button at anytime during any condition to display expanded system information.

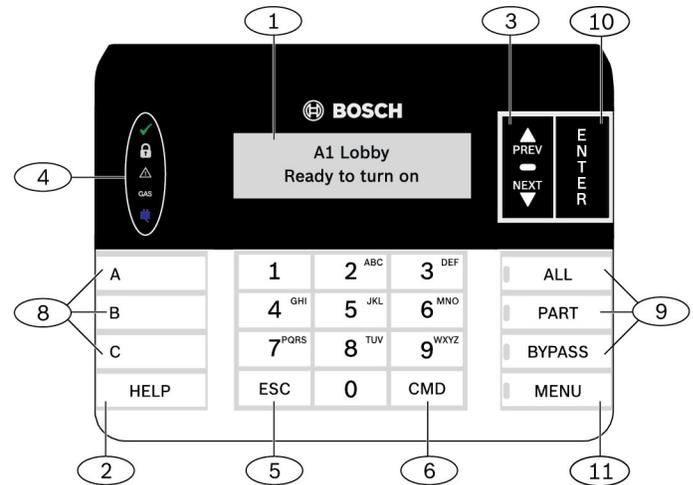

Callout Number	Description
1	Alphanumeric display
2	HELP key
3	PREV and NEXT keys
4	Status LEDs
5	ESC key (Escape)
6	CMD key (Command)
7	Softkeys (B930 only)
8	Programmable function keys (B920 only)
9	ALL, PART, and BYPASS keys (B920 only)
10	ENTER key (B920 only)
11	MENU key (B920 only)

Operating the Menu

1. Press the **MENU** key.
2. Press **1** for on/off menu
3. Press **2** for status menu
4. Press **3** for actions menu
5. Press **4** for users menu
6. Press **5** for settings menu
7. Press **6** for shortcuts menu
8. Press **7** for events menu

Arm and Disarm the System

1. Press **MENU 11** for the all on menu.
2. Press **MENU 12** for the part on menu.
3. Press **MENU 13** to disarm the system.

Check System Status

1. Press **MENU 21** to view area status.
2. Press **MENU 22** to view point status.

Add and Delete Users

1. Press **MENU 41** to change a users passcode.
2. Press **MENU 42** to add a user to the system.
3. Press **MENU 43** to edit a user.
4. Press **MENU 44** to delete a user.

Set Date and Time

1. Press **MENU 52**